


**NOTE! Applies only to vehicles with fitted roof bars.**

Completely unscrew the center bracket (A) from the cab by unscrewing the M6 bolts (1) in both the upper and lower bracket mountings on the cab (5). Save the bolts and sealing washers. Reinstall the bracket in the upper mount with one of the saved existing M6 bolts (1) through the bracket (2), followed by two washers (3) and finally the saved existing sealing washer (4). Repeat on the lower mount, but with three washers followed by the sealing washer (3).

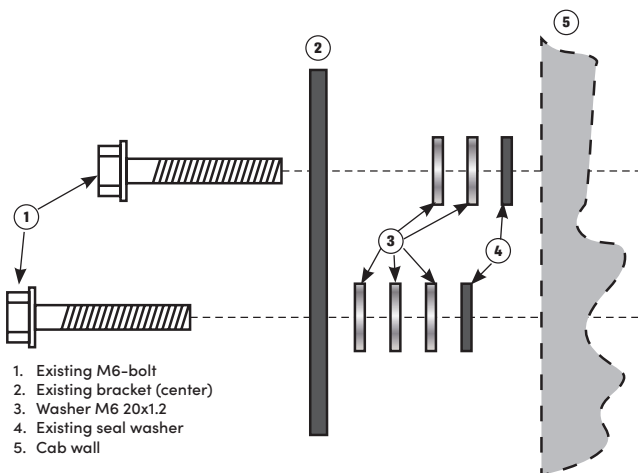

**Supplement to mounting instructions for Sunvisors made for Lazer LED-bars**

**Included mounting kit for Lazer LED-bars**

Pos	Name:	Art no:	Pcs
1	Sunvisor for DAF prepared for Lazer	311	1
2	Lazer Linear kit* (A) Lazer Linear 18 LED-bars (B) Y-cable	8011/8012	2 2 1
3	Mounting kit for Lazer (C) Bracket, left Lazer for Volvo (D) Bracket, right Lazer for Volvo (E) Hexagon screw M8x25 mm (F) Washer 8,4x24x2 mm (G) Locknut M8	2101	1 2 2 4 4 4

\*LED-bars and Y-cable only included with article number 8011/8012

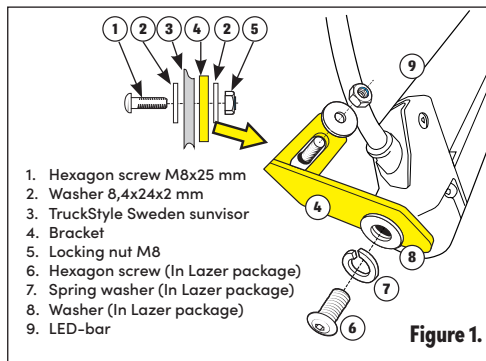
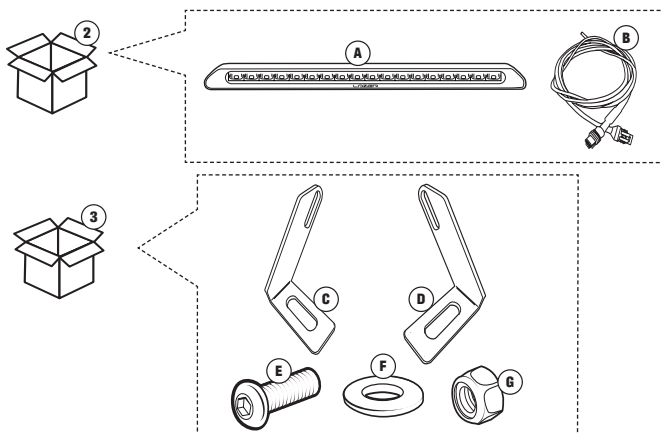


Figure 1.

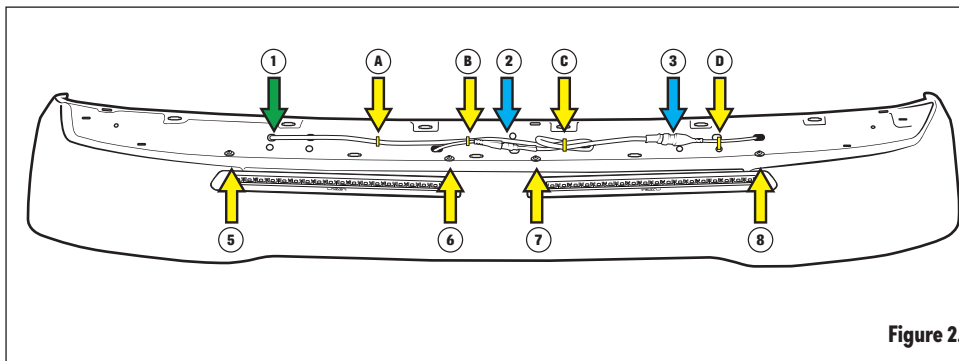


Figure 2.

**NOTE! Valid only on vehicles with Lazer LED-bar.**

Screw the LED-bars (9) to the fastening iron to the LED-bar with the supplied screw connections as shown in figure 1, enclosed in the box with the LED bars. Then screw the brackets in place by passing the hexagonal screw (1) with washer (2) from the front of the Sunvisor through the holes (5, 6, 7 and 8) as shown in Figure 2. On the back, thread on another washer (2) and tighten with an M6 lock nut (5). Pull the Y-cable (2) through hole (1) and connect the connectors from the LED-bars (2) and (3) to the Y-cable (2). Tighten the wiring with cable ties according to (A, B, C and D) in figure 2.

**TruckStyle Sweden AB**

Order: [order@truckstylesweden.com](mailto:order@truckstylesweden.com)  
+46 (0)70 007 9876  
[truckstylesweden.com](http://truckstylesweden.com)