



## CONTENTS:

Pos	Name:	Art no:	Pcs
1	Sunvisor for all Volvo prepared for 2 pos. lights Sunvisor for all Volvo prepared for 4 pos. lights Sunvisor for all Volvo prepared for 5 pos. lights Sunvisor for all Volvo prepared for 7 pos. lights	2112 2114 2115 2117	1
2	Front mirror extender	218	1
3	Mounting kit for sunvisor (A) Carriage bolt M8x30 (B) Washer 8,4x24x2 mm (C) Locknut M8	2100	1 3 6 3





**IMPORTANT!** If your sunvisor is prepared for LED-bar, read the instruction for LED-bars first (2191/2192).

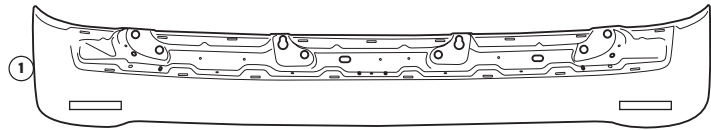

### IMPORTANT!

All installations should be done by experienced mechanics/vehicle electricians. In the event of your own modifications or making holes in the product, the warranty expires. Always follow the truck manufacturer's bodywork instructions regarding drilling and wiring in the cab. The same applies to the dimensioning of cabling and the connection of lighting.

TruckStyle Sweden AB does not take responsibility for any damage that occurs in the event of an incorrect installation.




1. Remove sunvisor from the cab by removing the 10 flange screws (1) and washers (2).



**NOTE!** Save the flange screws, washers, underlying seals and spacers. They're reused when installing the new sunvisor. The flange screws and flat washers at the two outer attachment points (3) are not reused.

1. Flange screw M8
2. Washer
3. Outer attachment point

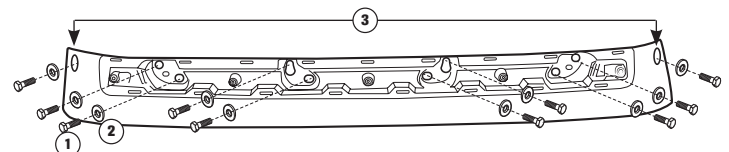


2. Seal the left outer attachment point (1). Repeat on the right side's attachment point. Plastic front cover (2) can be ordered from your local Volvo workshop. Art nr 82267370.



**IMPORTANT!** Seal the outer holes on the right and left side of the cabin so that water cannot penetrate into the cabin.

1. Cabin's outer attachment point
2. Cover (not included in installation kit)

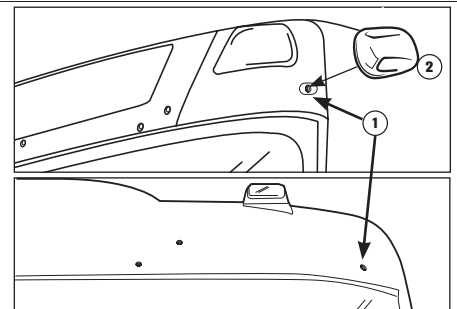


3. Remove the back cover of the front mirror (1) by first pushing in the two upper lockings (2) and then the three lower lockings (3).

Remove the front mirror from the cab by unscrewing the 3 flange screws (4), flat washers (5), spacers (6) and seals (7).



**NOTE!** Save spacers (6) and seals (7) to be reused.

1. Front mirror with back cover
2. Upper locking
3. Lower locking
4. Flange screw
5. Washer
6. Spacer
7. Seal

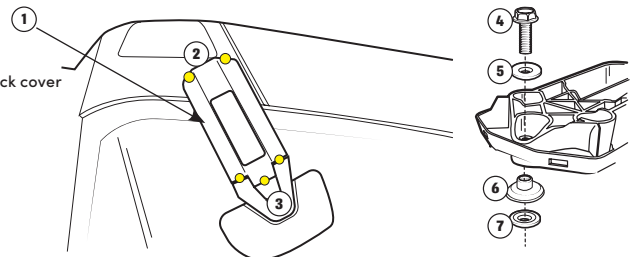


4. Place the mirror extender (1) on the front mirror with carriage bolts (6), spacers (4), seals (5), washers (3) and lock nuts (2).




**NOTE!** Fit the carriage bolts (6) so that the heads face the windscreen. If the screw connection sits with the nuts against the windshield, they might end up too close to the windshield and can cause damage to the windshield.


1. Mirror extender
2. Locknut M8
3. Washer 8,4x24x2
4. Spacer
5. Seal
6. Carriage bolt M8x30

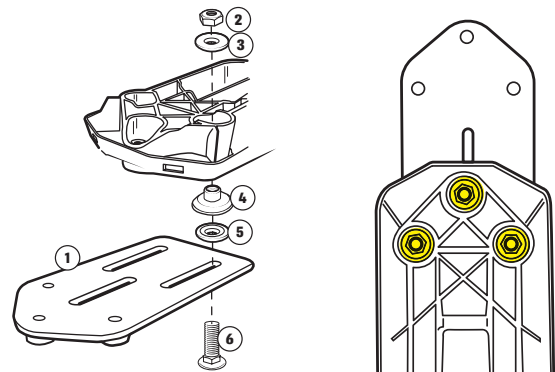

5. Apply a thin layer of sealant around the mounting holes for the front mirror on the cab (yellow marking).

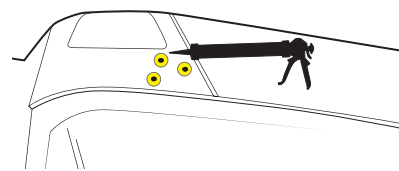


6. Install the front mirror with the extension on the cab with hexagonal screw (3), spring washers (2) and washers (1). Adjust the mirror and fit the back cover on the front mirror.

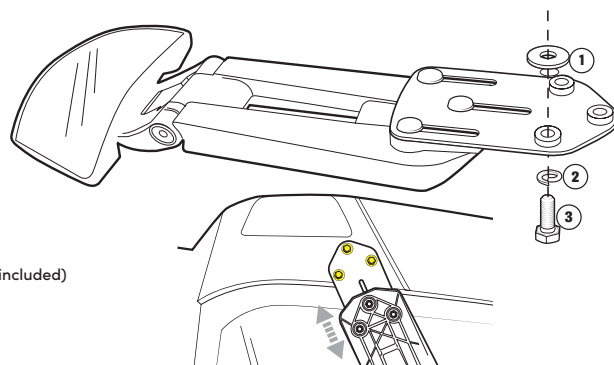

**IMPORTANT!** In the case of a high cab with a plastic front, any spacer sleeves in the holes for the front mirror must be reused so that you do not tighten directly against the plastic front and crack the plastic.

1. Washer 8,4x24x2 (facing cab)
2. Washer M8 (not included)
3. Hexagonal screw M8x40 (not included)


7. Mount the 4 seals (1-4) from the original sunvisor in the same order onto the new TruckStyle sunvisor. Insert the spacers in the same order as they were on the original sunvisor, or look at the provided picture for reference.

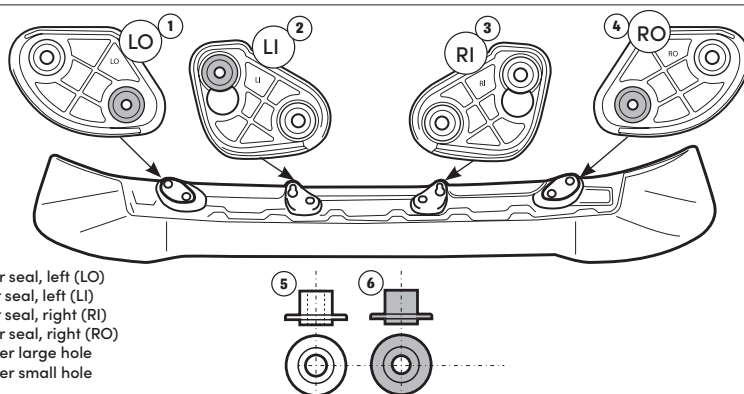

**NOTE!** On earlier models there may be separate rubber bushings for the spacers, put these in the same place as they were on the original sunvisor.

1. Outer seal, left (LO)
2. Inner seal, left (LI)
3. Inner seal, right (RI)
4. Outer seal, right (RO)
5. Spacer large hole
6. Spacer small hole


8. Mount the sunvisor on the cab with the original sunvisor's 8 flange screws (1) and washers (2).

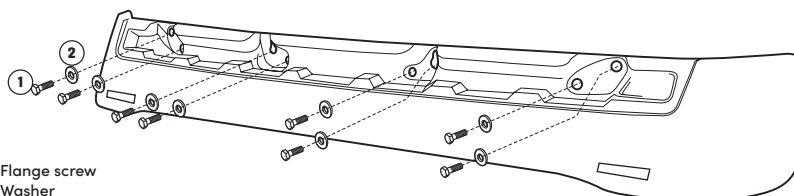

**IMPORTANT!** Tighten the screw joint by starting with the 4 middle flange screws and tightening the 4 outer ones last.

1. Flange screw
2. Washer

9. Put back the original sunvisor's 2 insulations (1) and then put the upper part from the original sunvisor to the new sunvisor.

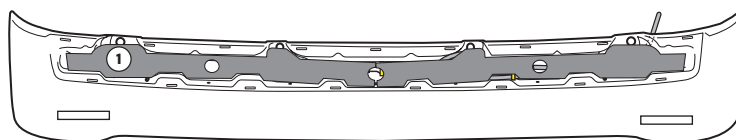

**TIP!** If the insulation is missing, it can be ordered from your local Volvo workshop. Art nr 23379723 from official Volvo workshop 2024/05.

1. Insulation

#### TruckStyle Sweden AB

Order: [order@truckstylesweden.com](mailto:order@truckstylesweden.com)  
+46 (0)70 007 9876  
[truckstylesweden.com](http://truckstylesweden.com)

